


ASSEMBLY INSTRUCTIONS FOR YOUR  
**Jonathan Adler**  
HAVANA HALF ROUND WALL SCONCE

**SAFETY INSTRUCTIONS:**

- \* These instructions are provided for your safety. It's important that **all** instructions are read before beginning installation of fixture.
- \* We **STRONGLY** recommend installation by a licensed electrician.
- \* Turn off power at switch before replacing bulbs, making sure fixture has had sufficient time to cool.
- \* Do not connect the electricity until lamp is fully assembled.

**ASSEMBLY INSTRUCTIONS:**

1. SHUT OFF MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER. IT IS RECOMMENDED THAT A LICENSED ELECTRICIAN INSTALL THIS FIXTURE.
2. Remove all parts from carton and discard packaging material.
3. Determine desire fixture orientation; fixture can be turned so it mounts from the top shade or the bottom shade.
4. Pull wires from fixture so they exit the hole in the center of the universal mounting plate.
5. Gently pull wires from wall outlet box. Lift the fixture to the wall outlet box and make proper electrical connections described in steps 6 - 8. A licensed electrician is recommended.
6. Connect the ground wire from fixture to the ground wire in the outlet box. Fasten wires together with wire nut (D) and tightly wrap connection with electrical tape. It is imperative that the outlet box in your home be properly grounded.
7. Connect the hot wire from fixture (BLACK in color, or SMOOTH side of wire) to the hot wire in the outlet box. Fasten wires together with wire nut (D) and tightly wrap connection with electrical tape.

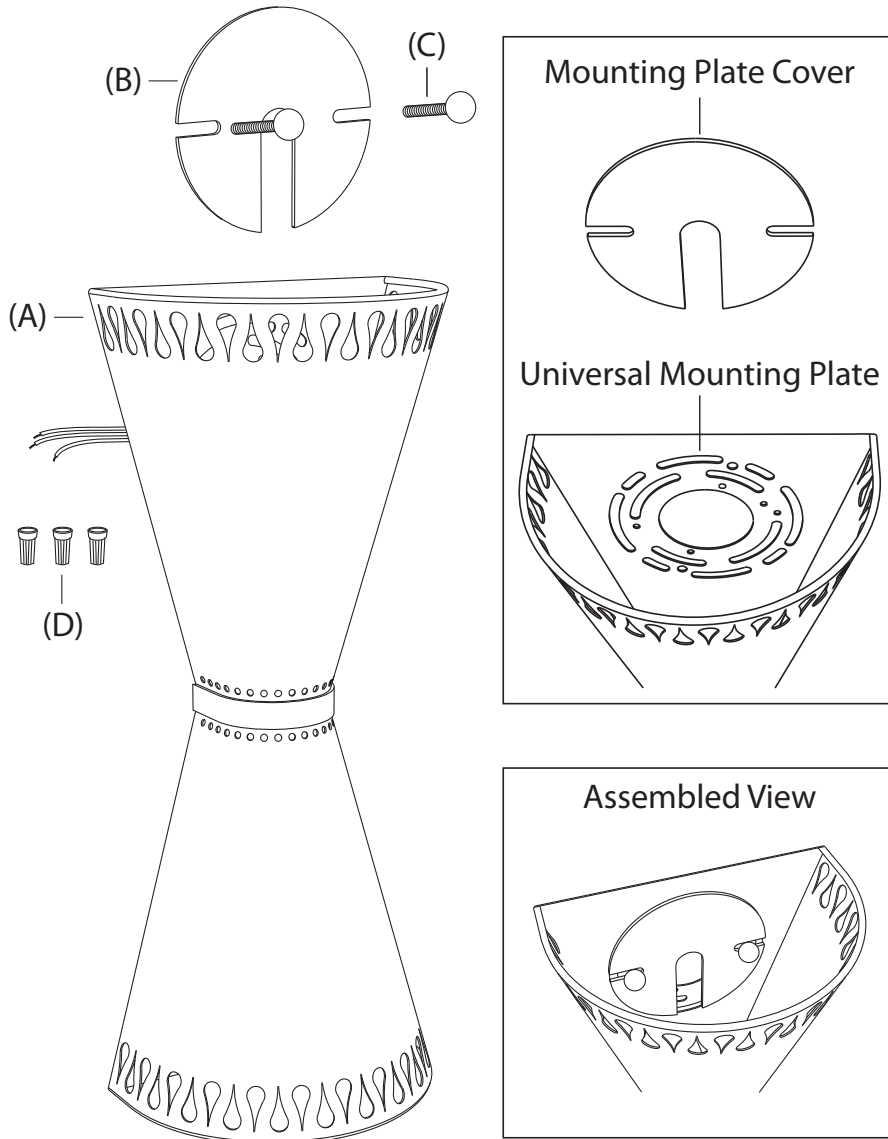

8. Connect the neutral wire from fixture (WHITE in color, or RIBBED side of wire) to the neutral wire in the outlet box. Fasten wires together with wire nut (D) and tightly wrap connection with electrical tape.
9. Gently push wire connections back into wall outlet box.
10. Hold the fixture against the mounting surface and align the universal mounting plate in the back of shade (A) with the wall outlet box.
11. Slide one thumbscrew (C) through the appropriate opening in the universal mounting plate and thread it into the hole in the wall outlet box. **DO NOT TIGHTEN THUMBSCREW (B) COMPLETELY.**
12. Slide the mounting plate cover (B) over the universal mounting plate. Slide the large opening in the mounting plate cover over the fixture wiring and place the smaller notch over the installed thumbscrew. Thread the remaining thumbscrew (C) through the other notch and into the wall outlet box. Turn the thumbscrew until hand tight.
12. Install (2) two 60W MAX. B10.5 Candelabra base bulbs into the sockets.
- 13 Reconnect the electricity at the main fuse box/ circuit breaker and test fixture.

\*\* To clean, use soft dry cloth only. DO NOT use any chemical or abrasive cleaners, as they can damage the finish. \*\*